 









Below is a list of available accessories for XetaWave products.

MODEL NUMBER	DESCRIPTION COMPATIBILITY (C:)
MOUNTING BRACKET	
BRACKET 	L-shaped mounting bracket for board level radios. Holes for mounting din rail. C: Any board level radio - e.g., XETA9X-11INLFC.
DINRAIL MOUNTING CLIPS	
DINRAIL 	Dinrail mounting clip for metal enclosure C: Any enclosed radio or BRACKET - e.g., ***MLFC.
DINRAIL-P	Dinrail mounting clip for plastic enclosure. <i>Note: Not compatible with bracket or metal enclosure.</i> C: Any plastic enclosure - e.g., ***PLMFC. <i>Note: NOT compatible with bracket or metal enclosure.</i>
POWER CONNECTORS	
CM-001 	2 pin power connector C: Any board level or enclosed radio.
POWER SUPPLIES	
PS1-001 	AC power supply with AC cord and 2-pin power connector. 120V AC IN/12 VDC OUT. Supports 3.3A output. C: Any XetaWave radio

MODEL NUMBER	DESCRIPTION COMPATIBILITY (C:)
POWER SUPPLIES CONT.	
PS2-001 	AC Power supply with AC cord and 2-pin power connector. 120VAC IN/24VDC OUT C: Any XetaWave radio.
IO CONNECTORS	
CM-002 	4 pin IO connector mate C: Any enclosed non-IO radio - e.g., -12IMLFC, -22IMLFC, -22DMLFC, -12IPLFC, -22IPLFC, -22DPLFC.
CM-003 	12 pin IO connector mate C: Only for enclosed IO radios, the IO Expander, and XetaEdge Computers with IO.
ADAPTOR	
RJ45DB9 	RJ45 to Serial Adapter C: Any XetaWave radio.